

LED Downlight ILS/6 Installation Instruction



Please read these instructions carefully before commencing installation and retain for future reference. If in doubt, we advise that you consult a qualified electrician to install the product. These products must not be modified. If any modification is made it may invalidate the warranty and may render the product unsafe. All electrical installations must be carried out according to current IEE Wiring Regulations.

<p>1.</p> <p>•Unscrew and remove top ring of lamp; •Screw the lamp onto Mounted Ring.</p>	<p>2.</p>	<p>3.</p>
<p>4.</p>	<p>5.</p> <p>NO COVER ALLOWED</p>	<p>6.</p>

ILS/6 A1 	ILS/6 F4 	ILS/6 A5
ILS/6 R1 	ILS/6 A6 	ILS/6 S6
ILS/6 F6 	ILS/6 S5 	
ILS/6 D1 	ILS/6 D2 	ILS/6 D3

Important safety Notes

1. Switch off the electricity at the mains before commencing installation or lamp change and (if a fuse box is used) remove the appropriate circuit fuse to avoid accidental switching on of the mains supply.
2. Connect to a 220V-240V supply in accordance with IEE regulations.
3. Make sure all connections are tight with no loose strands.
4. Ensure fire regulations are not breached when fitting your lights.

Warning:

1. For indoor use only.
2. Please ensure that the packaging is disposed of in a safe environment.
3. If cable is defected, do not use or exchange the cable.
4. Do not connect the light engine to the mains voltage directly.
5. Do not look at the lighted lamp directly.
6. We do recommend that a qualified electrician should be used to install the products.

